

# Installation Instructions

## AL675 Actuator Lift

### Design Highlights

- Push up lid
- Full cable management
- Compact design for minimum spatial requirements
- Only 20mm of height above television required
- Near silent motor system



Thank you for choosing  
**futureautomation**

# AL675 Actuator Lift



Caution  
Warning



Beware of  
Moving Parts



Danger  
Electricity



Keep Hands  
Clear

## Safety Disclaimer

Important Safety Instructions

Explanation of graphical symbols

-(Electric Shock Symbol) = The lightning flash within an equilateral triangle is intended to alert you to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute an electric shock to persons

-(Caution Symbol) = The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product

-(Tools Symbols) = The tools symbol within a coloured square are intended to highlight the required tools necessary for correct and safe installation of the product. These are intended as a guide only, and it is at the installer's discretion as to which tools are used.

**WARNING: RISK OF ELECTRIC SHOCK, ONLY AUTHORIZED INSTALLERS TO OPEN THE POWER CONTROL BOX.**

**WARNING:** To reduce the risk of fire or electric shock, do not expose electrical parts to rain or moisture, unless the product has been specifically designed to do so.

**WARNING:** Failure to provide adequate structural strengthening, prior to installation can result in serious personal injury or damage to the equipment. It is the installer's responsibility to ensure the structure to which the component is affixed can support the four times the weight of the component.

**WARNING:** Do not exceed the weight capacity. This can result in serious personal injury or damage to the equipment. It is the installer's responsibility to ensure that the total combined weight of all attached components does not exceed that of the maximum figure stated.

**WARNING:** Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.

## Warnings:

1. **Read all technical instructions fully before installation and use. It is the installer's responsibility to ensure that all documentation is passed on to the end user and read fully before operation.**
2. **Keep all documentation.**
3. **Heed all warnings.**
4. **Follow all technical specifications and instructions during installation.**
5. **Do not use near water unless the product has been specifically designed to do so.**
6. **Clean only with a dry cloth.**
7. **Do not defeat the purpose of the polarized or grounding type plug. A polarized plug has two blades, one wider than the other. A grounding type plug has two blades and a grounding prong. The wide blade or third prong are provided for your safety. If the provided plug does not fit your outlet, consult an electrician or contact the manufacturer.**
8. **Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where the exit from the apparatus.**
9. **Unplug the apparatus during lightning storms or when unused for long periods of time.**
10. **Only use attachments/accessories specified by the manufacturer.**
11. **Refer all servicing to qualified personnel. Servicing is required regularly on an annual basis, when the apparatus is damaged in any way, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.**
12. **To completely disconnect the apparatus from the AC mains, disconnect the power cord plug from the AC receptacle on the power control box.**
13. **To prevent overheating, do not cover the apparatus. Install in accordance with the instructions.**
14. **UK, Ireland and Hong Kong only – The power cord is supplied with a 13A plug having an earthing pin. The apparatus is earthed and this pin is not required for safety, merely to operate the safety shutter of mains outlet.**
15. **No naked flames such as lit candles should be placed on the unit.**
16. **Observe and follow the local regulations when disposing of batteries.**
17. **Do not expose the unit to dripping or splashing fluids.**
18. **Do not place objects filled with liquid, such as vases, on the unit.**
19. **Do not expose the batteries to excessive heat such as sunshine, fire or the like.**
20. **For all mounted apparatus, the apparatus should be installed on solid wood, bricks, concrete or solid wood columns and battens.**
21. **Always turn off power at source before putting on or taking off parts and cleaning.**
22. **Do not use outdoors unless marked for outdoor use.**
23. **Exceeding the weight capacity can result in serious personal injury or damage to equipment.**


Future Sound & Vision trading as Future Automation intend to make this and all documentation as accurate as possible. However, Future Automation makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without prior notice or obligation of any kind. Future Automation makes no representation of warranty, expressed or implied, regarding the information contained herein. Future Automation assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

# AL675 Actuator Lift

Contents	Page
Introduction	
Safety Information	1
Contents	2
Contents	3
Tool Indicator Icons	3
Installation	
Parts List	
Package Contents	4
Stage 1	
Before You Start	5
Resetting The AL675	5
Stage 2	
Fixings To The Cabinet	6
Stage 3	
Releasing The Screen Uprights	7
Stage 4	
Aligning The Screen	8
Stage 5	
Mounting The Screen	9
Stage 6	
Inserting The Shelf	10
Stage 7	
Connecting The Push Bar	11
Stage 8	
Final Checks	12
Electrical Connections	
Contact Closure	13
IR Controls	14
RF Controls	15
Operations	
IR Control	14
IR Operation	14
Storing Positions	14
Changing Batteries	14
RF Control	15
RF Operation	15
Trouble Shooting	16
Technical Overview	17

# AL675 Actuator Lift

## Tool Indicator Icons

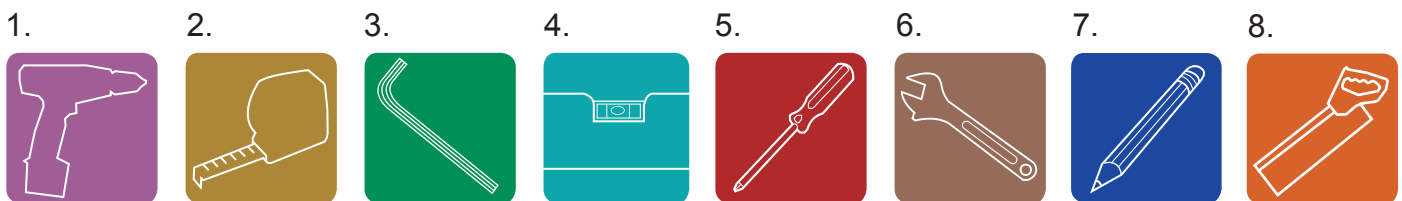

1. - Drill

2. - Tape measure

3. - Allen Keys

4. - Spirit Level

5. - Screwdrivers

6. - Spanners

7. - Pencil

8. - Saw

## Product Warranty

This product carries a warranty that covers the cost of labour and spare parts incurred by any defects in materials and workmanship under normal use during a two year period from date of purchase. Support for any problems that are not hardware faults are excluded from the warranty entitlement. This warranty does not affect your statutory consumer rights.

The following is excluded from warranty service:

- Malfunctioning caused by misuse or damage, accidental or otherwise, or service modification by persons not authorised by Future Automation, or the use of any non Future Automation supplied parts;
- Any electrical, or other environmental work external to your Future Automation mechanism including power cuts, surges or lightning strikes;
- Additional items not supplied by Future Automation although they may have been supplied together by the retailer;
- Any 3rd party software products controlling your mechanism;
- Any transfer of ownership. Warranty is provided only to the initial purchaser;
- Compensation for loss of use of the product, and consequential loss of any kind;
- Use of the product over the specified weight capacity;
- Any damage to products during transit that is not checked and notified as "unchecked" or "damaged" upon receipt of delivery.

Any part of your system that needs to be replaced during a warranty repair becomes the property of Future Automation.

# AL675 Actuator Lift

## Package Contents




- 1 - Mechanism
- 1.1 - Base Plate
- 1.2 - Linear Actuator
- 1.3 - Base Shelf
- 1.4 - Shelf Bracket
- 1.5 - Cable Management Bracket
- 1.6 - Top Bracket
- 1.7 - Screen Plate
- 1.8 - Screen Uprights
- 1.9 - Push Bar
- 1.10 - Cable Management
- 2 - Power Supply Unit
- 3 - RF Control Box
- 4 - RF Manual Key Pad
- 5 - Remote Control
- 6 - IR Control Box
- 7 - IR Remote Control

## Not Shown On Page

- 8 - x2 AAA Batteries
- 9 - Multi Pack Of Nuts, Bolts & Washers
- 10 - Mains Power & Other Leads
- 11 - Felt Pad

## Nuts & Bolts Multipack:

A range of nuts, bolts, washers and spacers to help add in the mounting for your screen

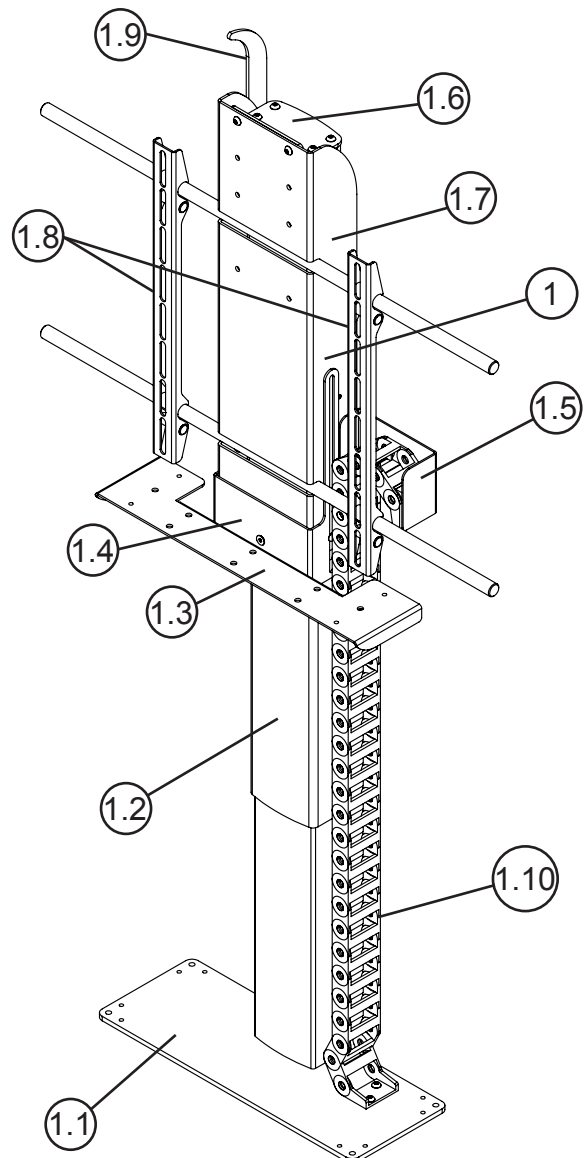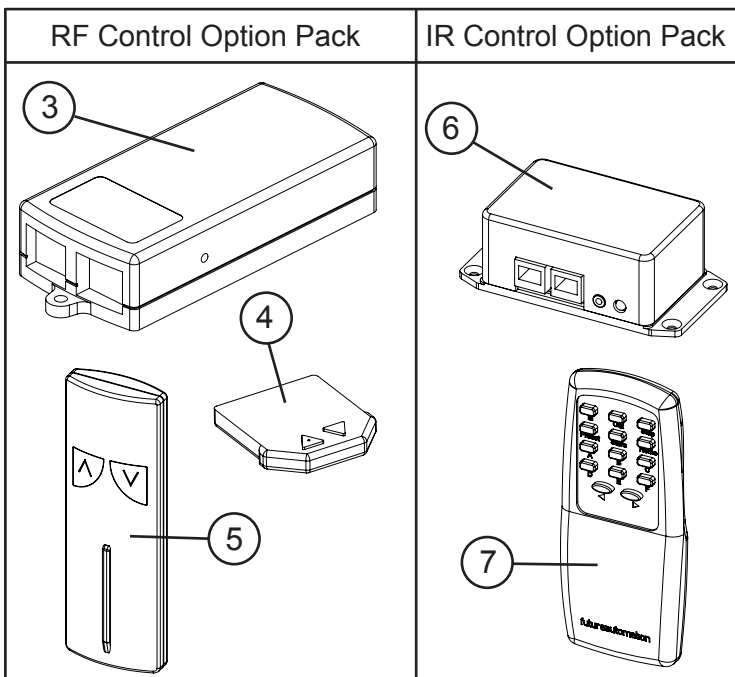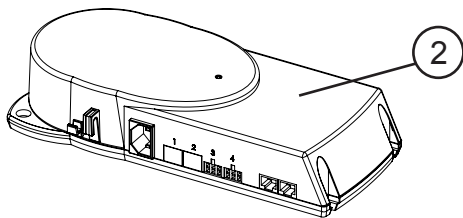


# AL675 Actuator Lift

## Before you start

Prior to installation check the following:

- The product is in good condition
- No damage to any parts
- Wiring is all secure
- The unit is in the closed position
- Test the mechanism by running it up and down

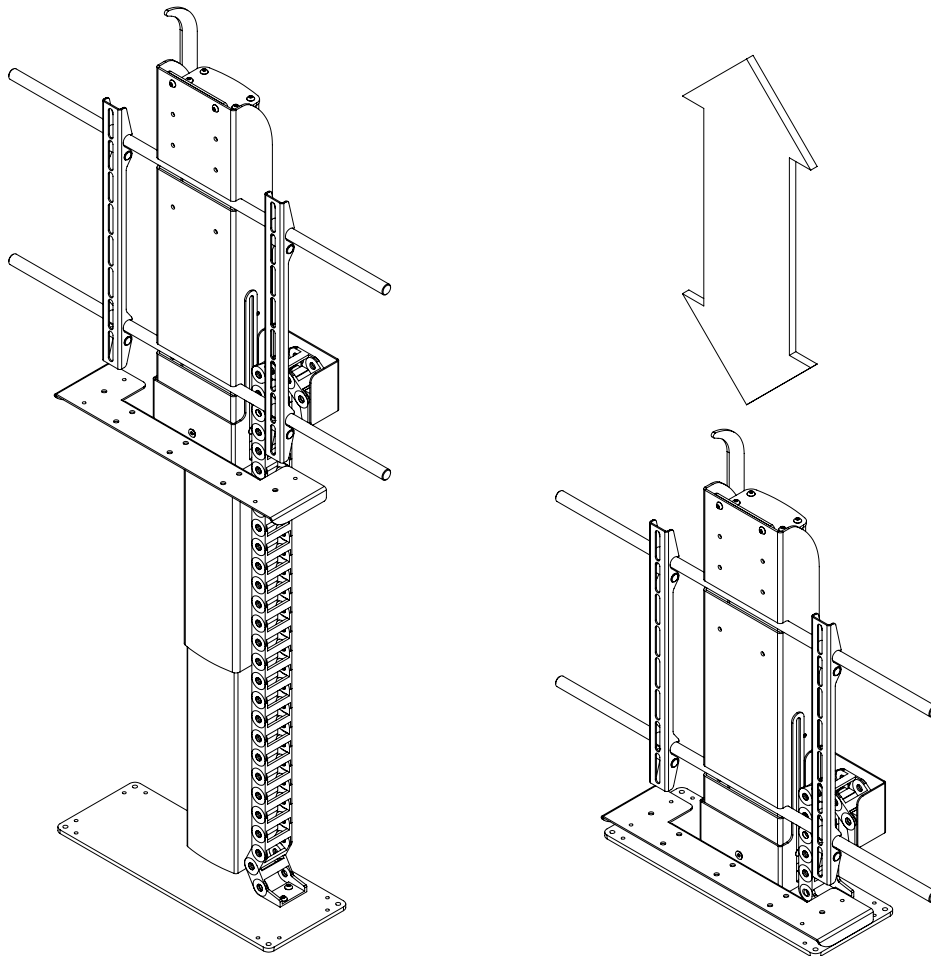


## Resetting the AL675



The AL675 mechanism will not move until it has been reset:

- To reset the product using IR press the 'LEFT ARROW BUTTON' which is shown until the mechanism is fully lowered
- Using the RF control press the 'DOWN BUTTON' shown until the mechanism is fully lowered
- Release then hold down again for 5 seconds. AL675 mechanism should make a small down then up movement to show the reset
- The product is then ready to use
- For more remote settings and features refer to page 14-16

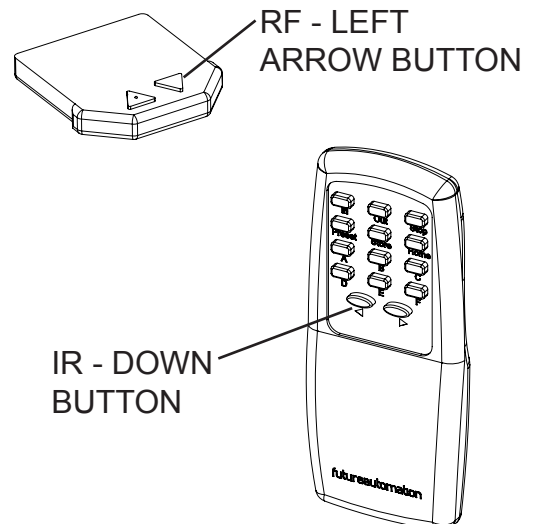


# AL675 Actuator Lift



## Fixing to the cabinet

-Place the mechanism into the cabinet and fix into place (fixings not supplied.)

- Check the measurements of the cabinet to the technical sheet



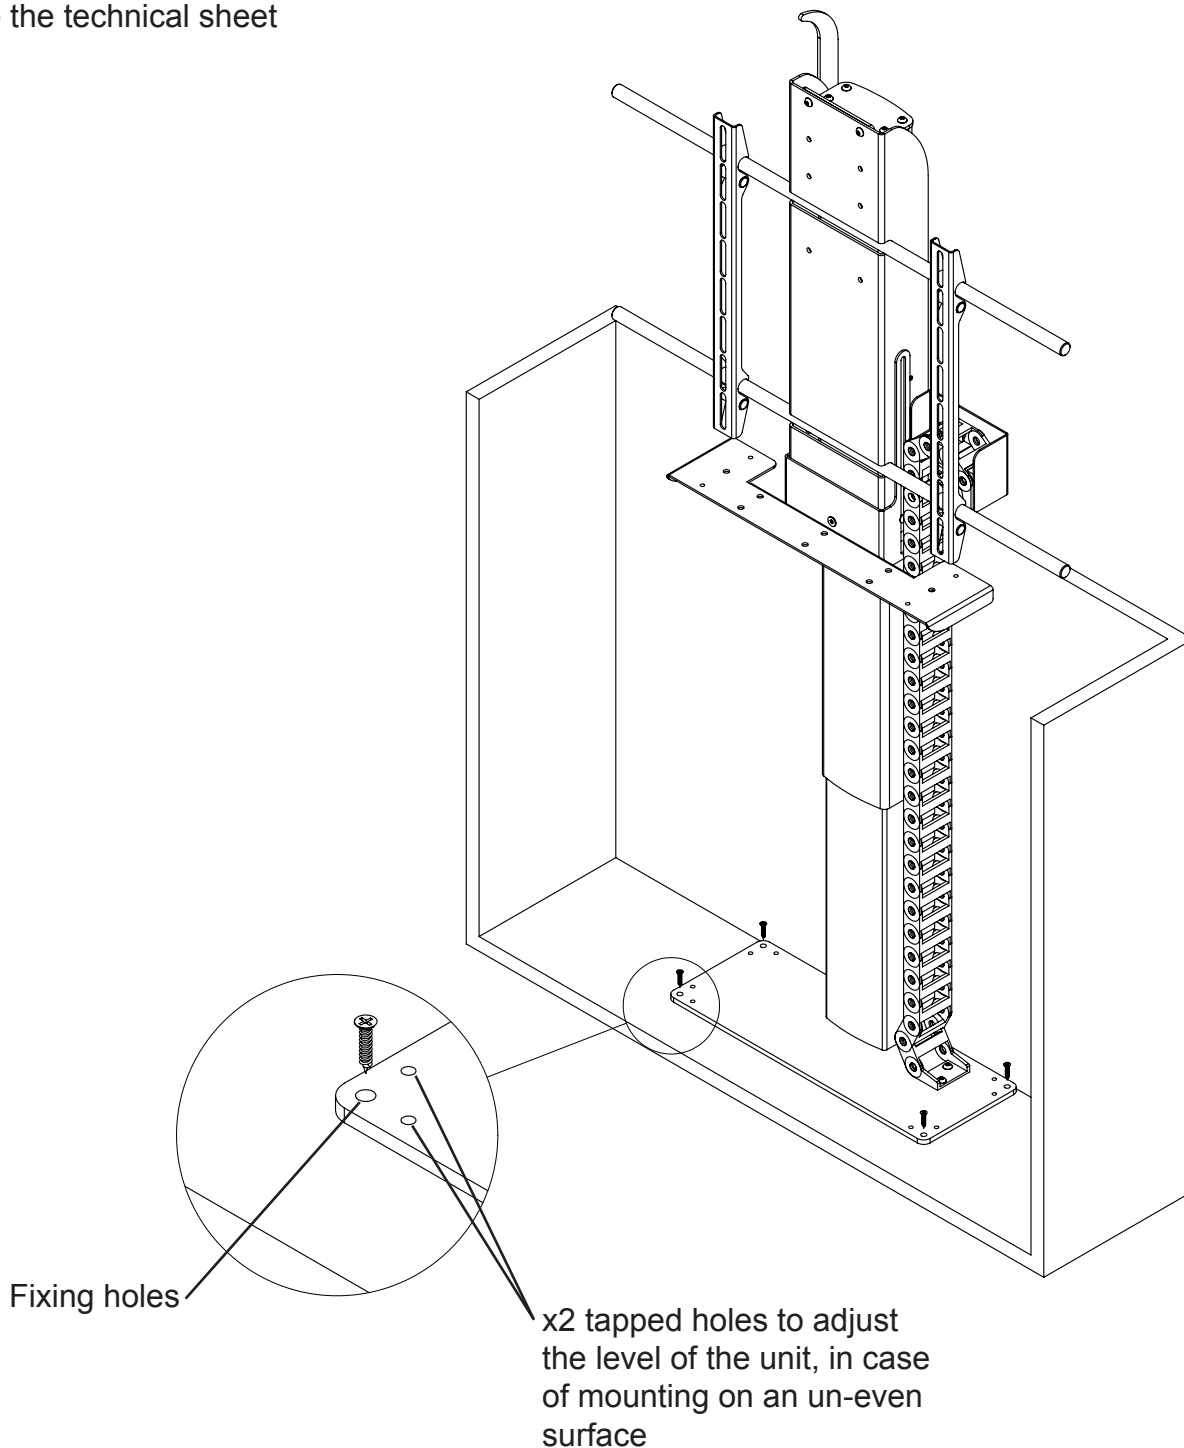


# AL675 Actuator Lift



## Releasing the screen uprights

Loosen upright bolts as shown to release screen uprights from screen plate

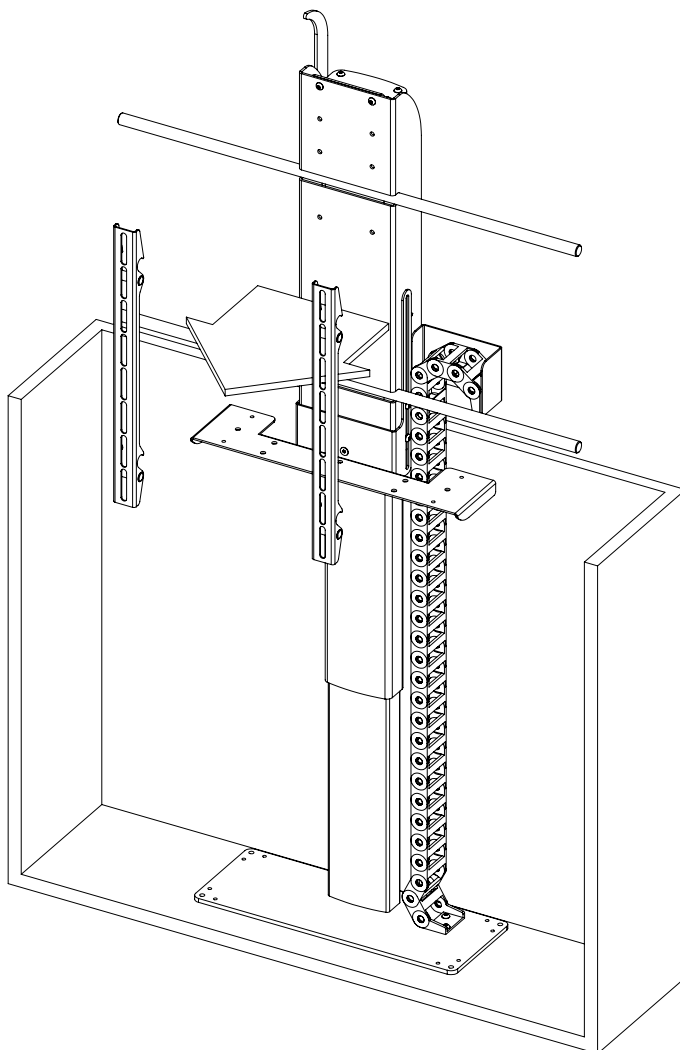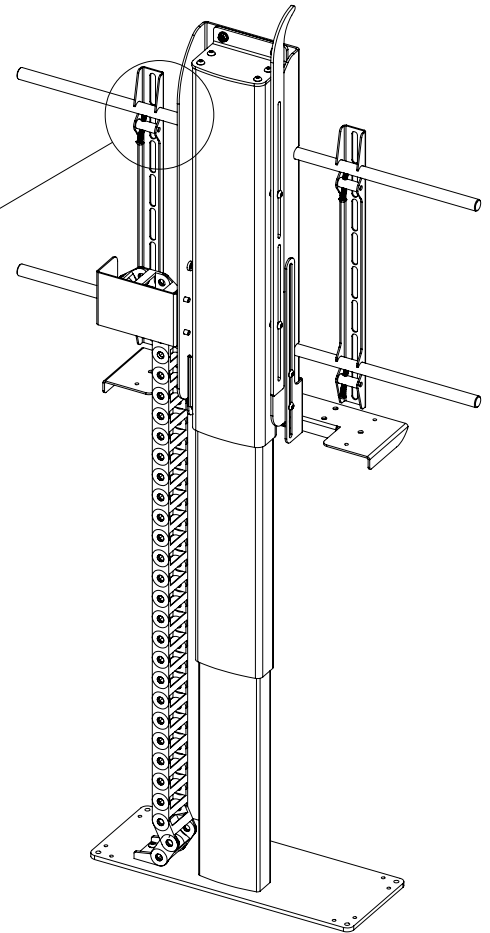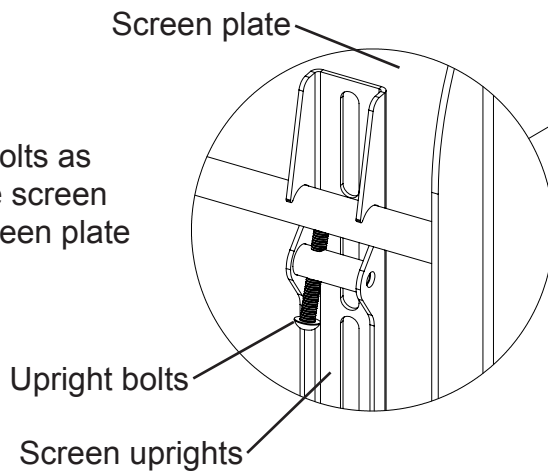

- Remove screen up rights by unhooking over horizontal bars
- Organise cables so they run through the cable management chain and are neatly organised in the bottom of the cabinet




# AL675 Actuator Lift




## Aligning the screen

Align the top of the screen so that it's just below the underside of the lid when the mechanism is in the IN position

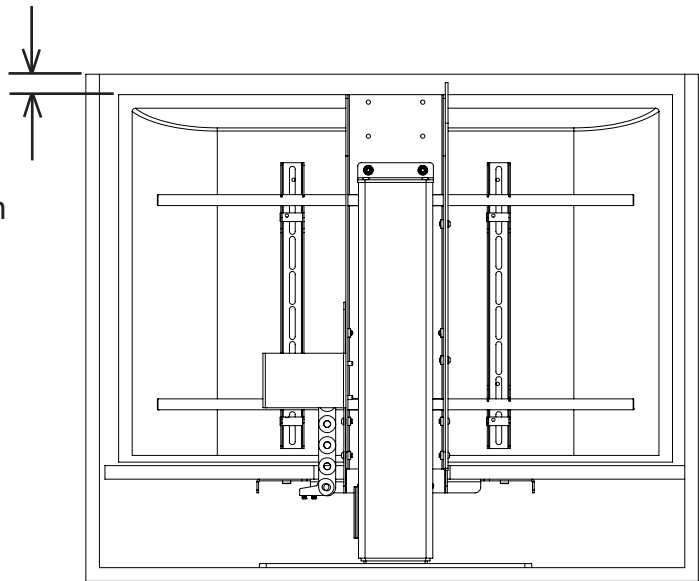

Change the height of the screen by altering the mounting holes in the screen plate


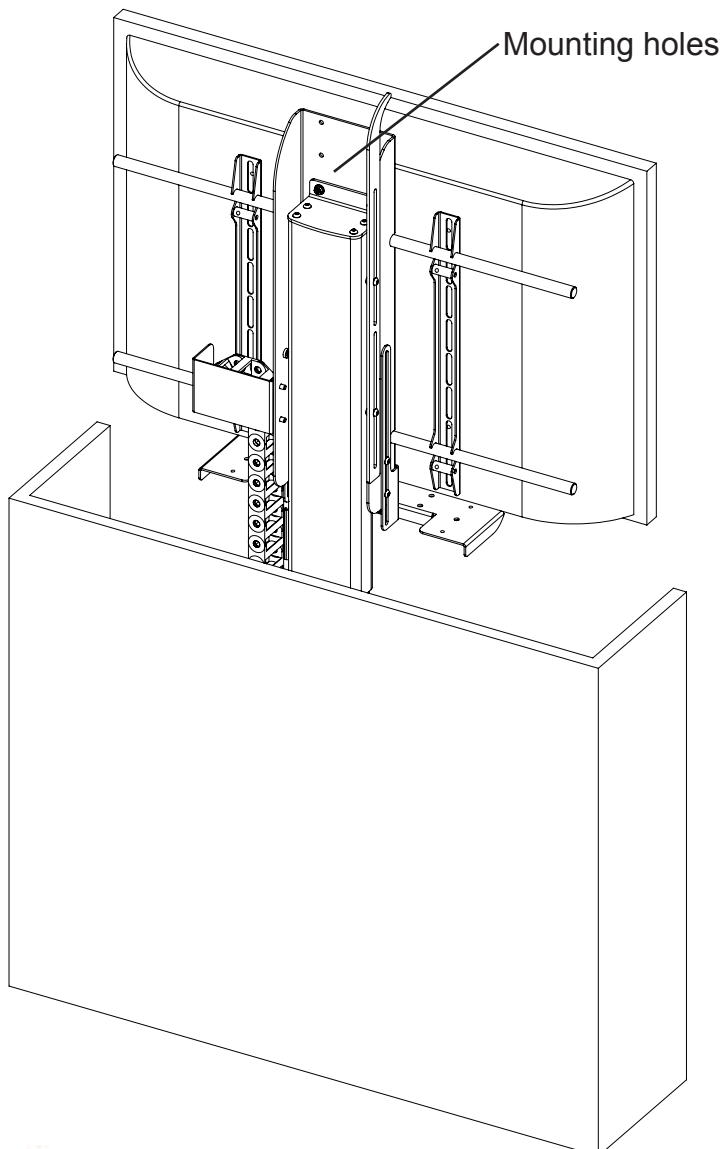


# AL675 Actuator Lift



## Mounting the screen

- Place the screen uprights into position on the back of the screen
- Secure into place using the range of nuts, bolts and washers provided

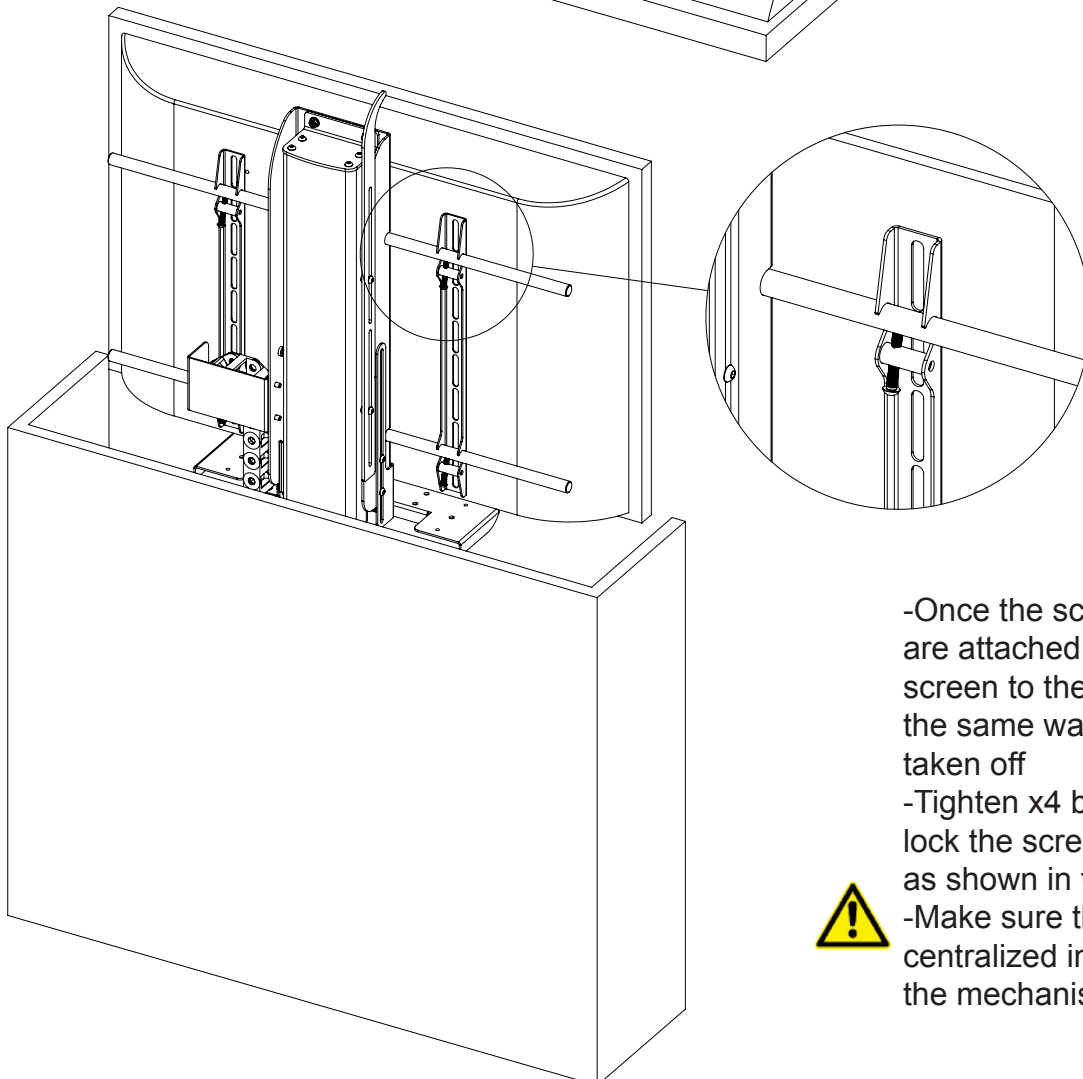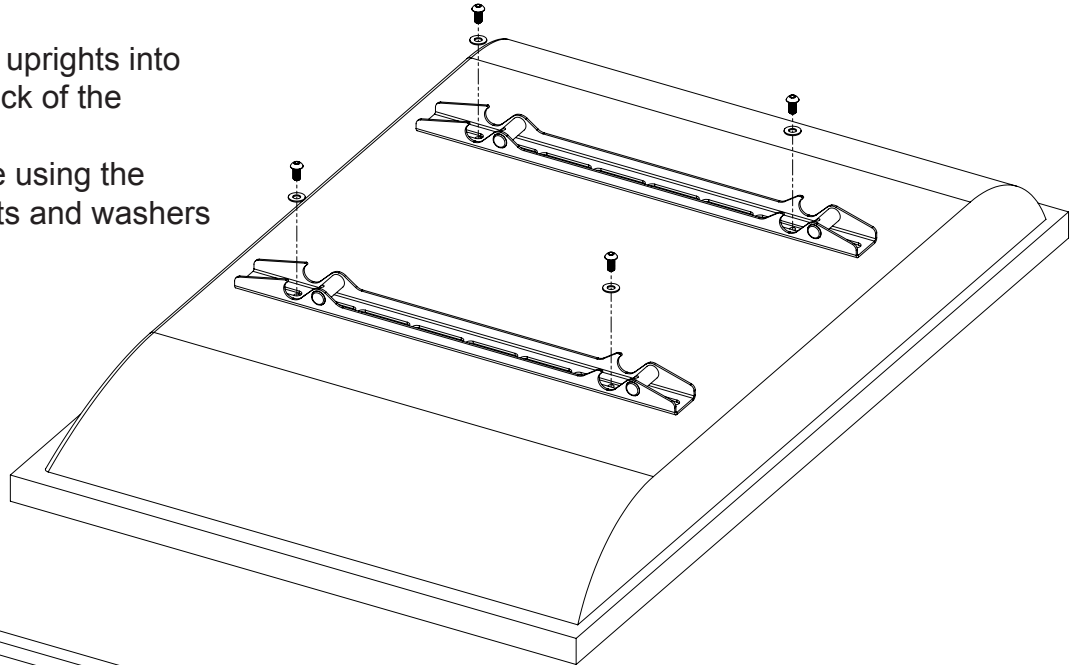


- Once the screen uprights are attached, overlap the screen to the horizontal bars the same way as they were taken off
- Tighten x4 bolts back up to lock the screen into position as shown in the detail view
- Make sure the screen is centralized in the middle of the mechanism



# AL675 Actuator Lift





## Inserting the shelf

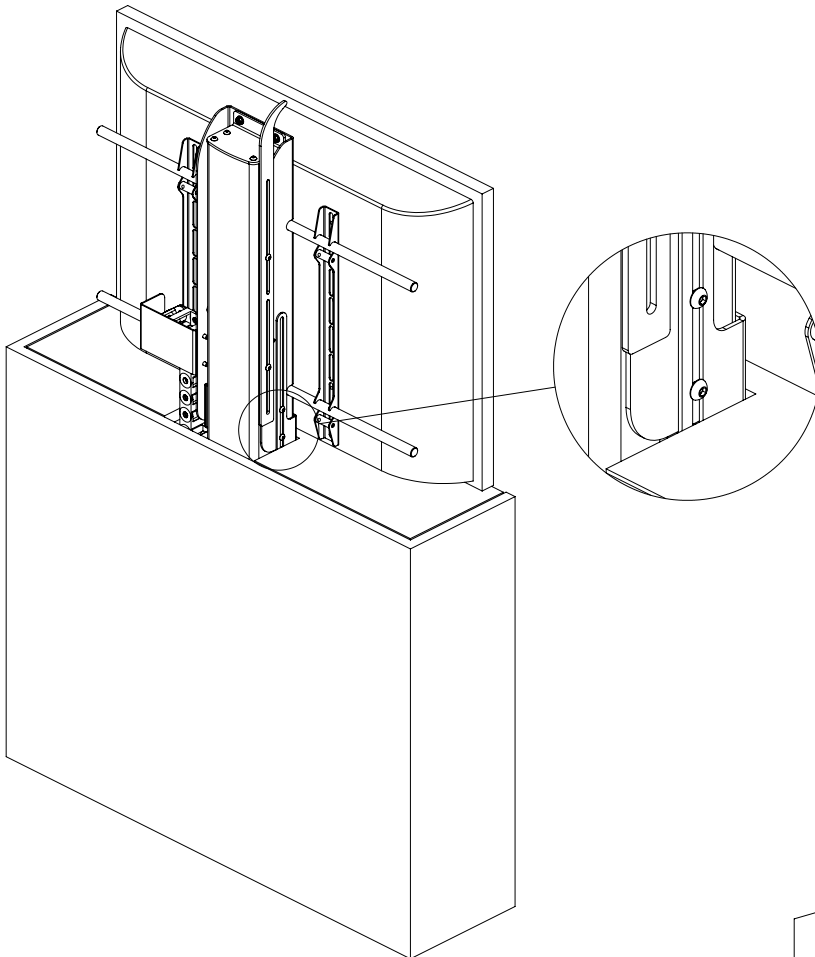

Adjust the fixings on the shelf bracket to determine the height of the shelf. Change the height of the shelf so that it fills the void neatly and sits flush to the top surface

- Slide the shelf into position under the screen and on top of the base shelf
- Secure into place through the middle holes on both sides
- Optional* - Use bolts in the corners to push up and level the shelf.

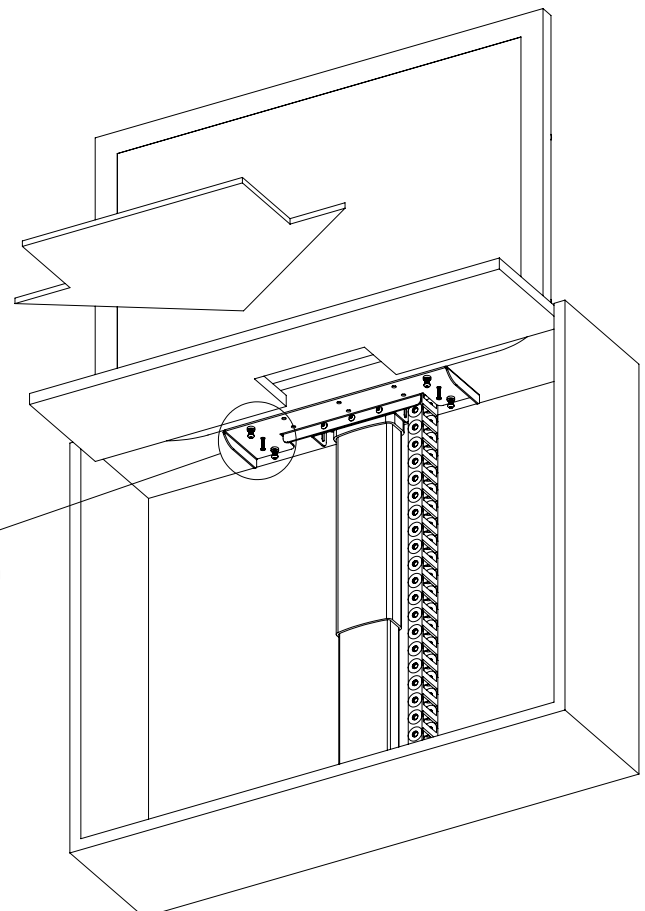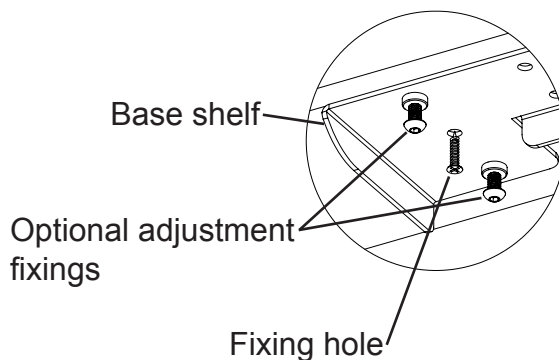

# AL675 Actuator Lift





## Connecting the push bar

-Stick the felt pad onto the underside of the lid so it's in-line with the push bar.



-Make sure that when the mechanism opens the push bar is in contact with the felt pad

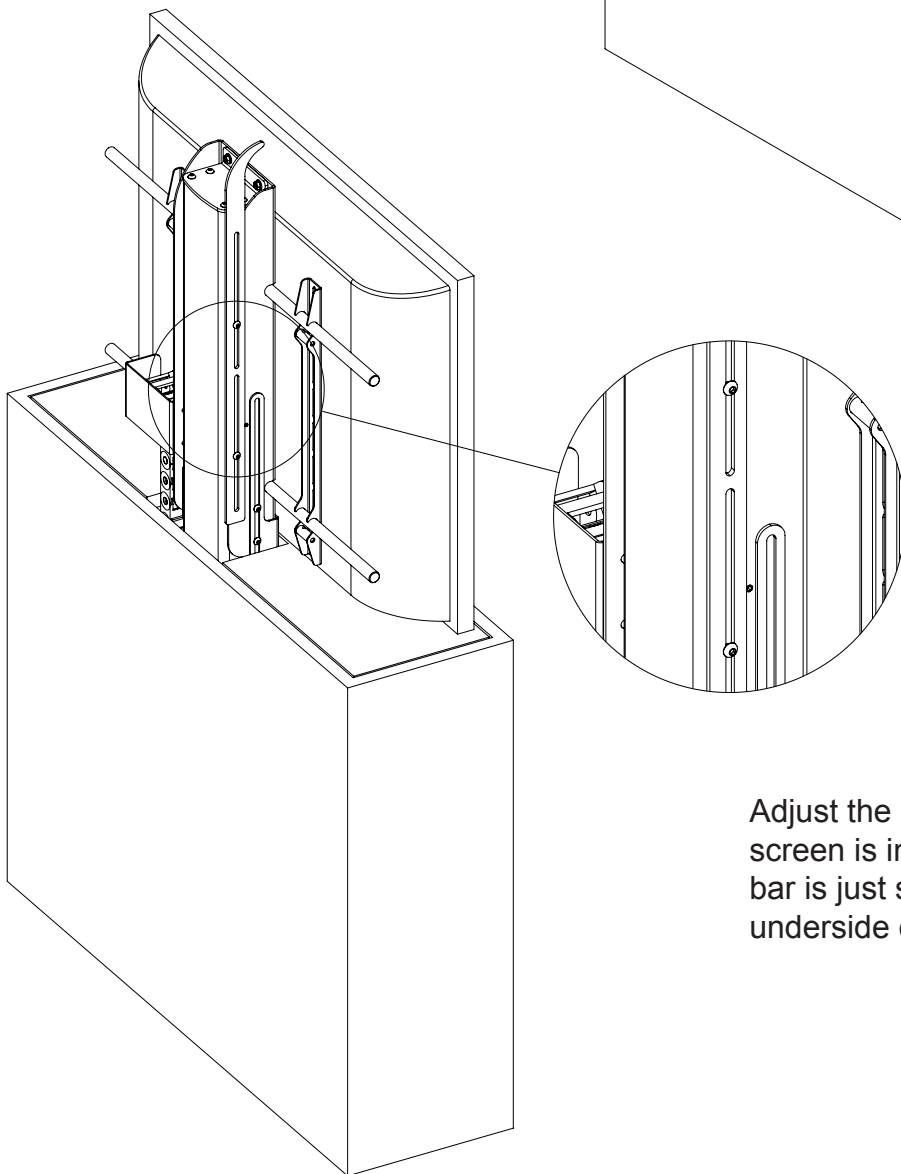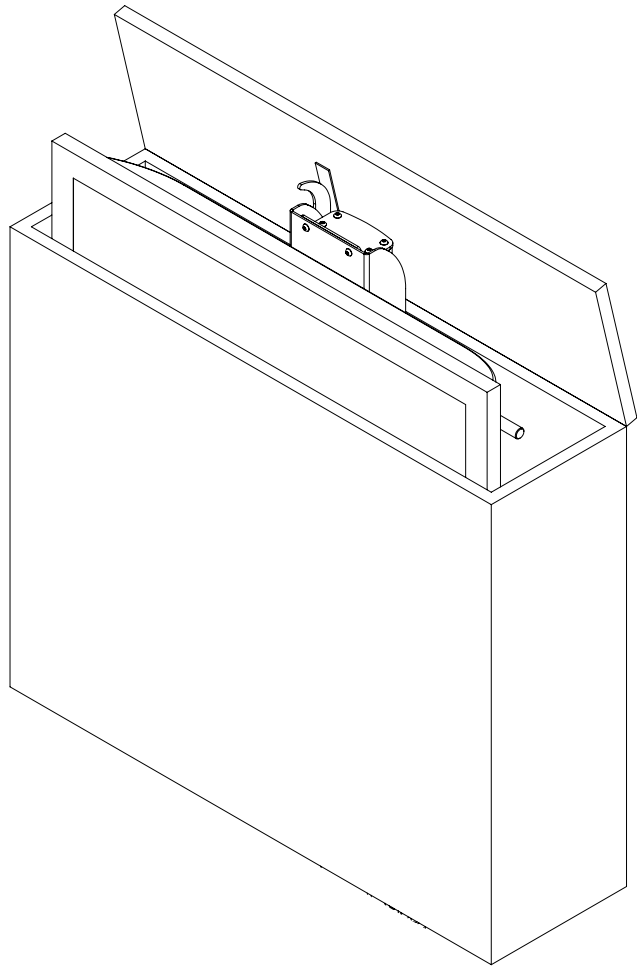

Adjust the push bar so when the screen is in the IN position the push bar is just short from touching the underside of the lid


# AL675 Actuator Lift




## Final checks

Final movement.  
Make sure the unit runs smoothly and that the push bar hits and then runs along the felt pad.

- Make sure that the lid doesn't fall back over its self when the unit opens.
- Product is level and square in the cabinet
- The mechanism runs smoothly and to the stored positions

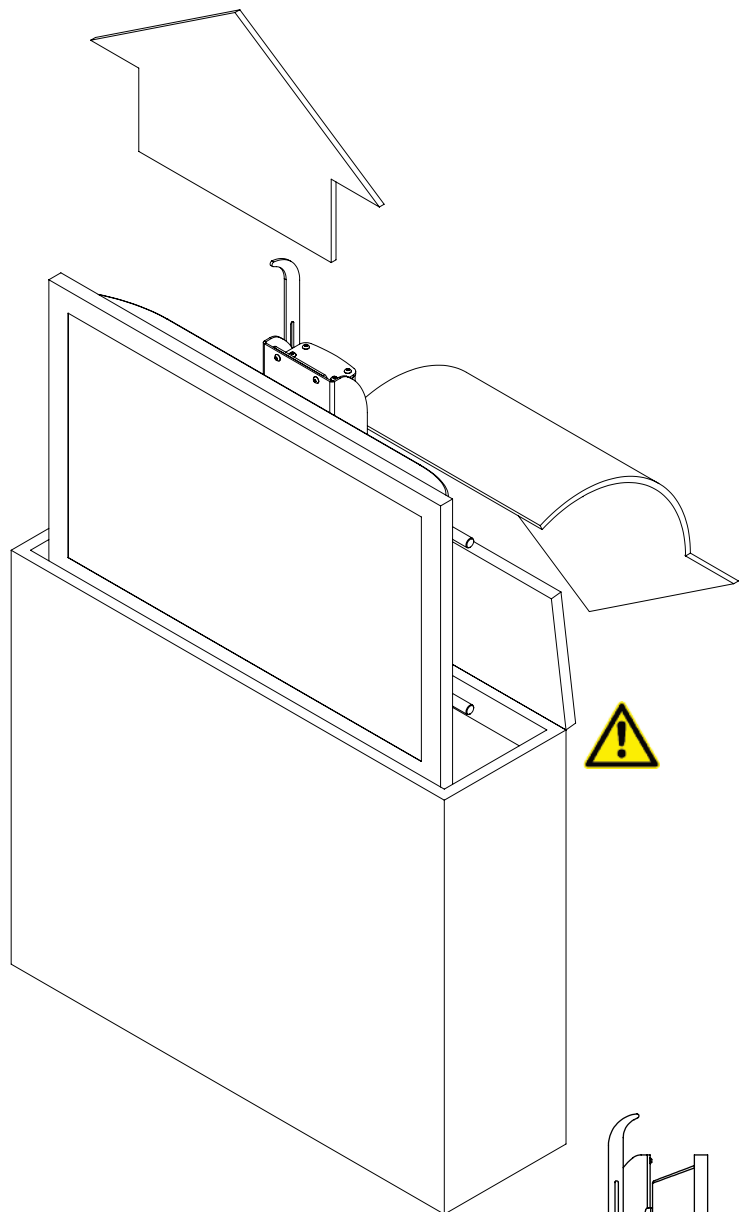

The mechanism movement should look like this:

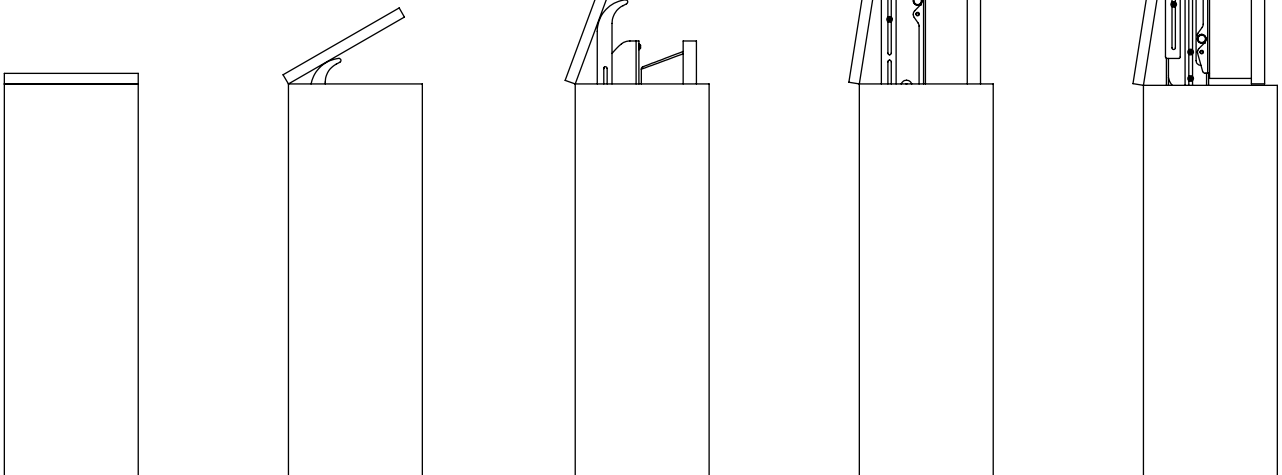


# AL675 Actuator Lift



## Contact Closure

- Use an RJ45 connector in the appropriate socket on the control box to operate via contact closure

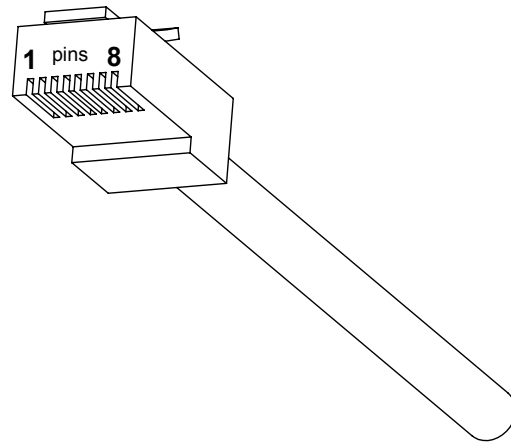


PIN	Description	Action	Wire/Cable	
			568A	568B
1	PIN 1 NOT USED			
2	PIN 2 NOT USED			
3	Common Ground	Common Ground (Pin 3)	W/O	W/G
4	Device Latched	When shorted to ground device goes OUT	BL	BL
5	PIN 5 NOT USED			
6	Device Stop	When shorted to ground (Pin 3), stops device in current position	O	G
7	Device Out	Momentary short to ground (Pin 3) will make device go OUT	W/BR	W/BR
8	Device In	Momentary short to ground (Pin 3) will make device go IN	BR	BR

# AL675 Actuator Lift



## IR Controls General Wiring

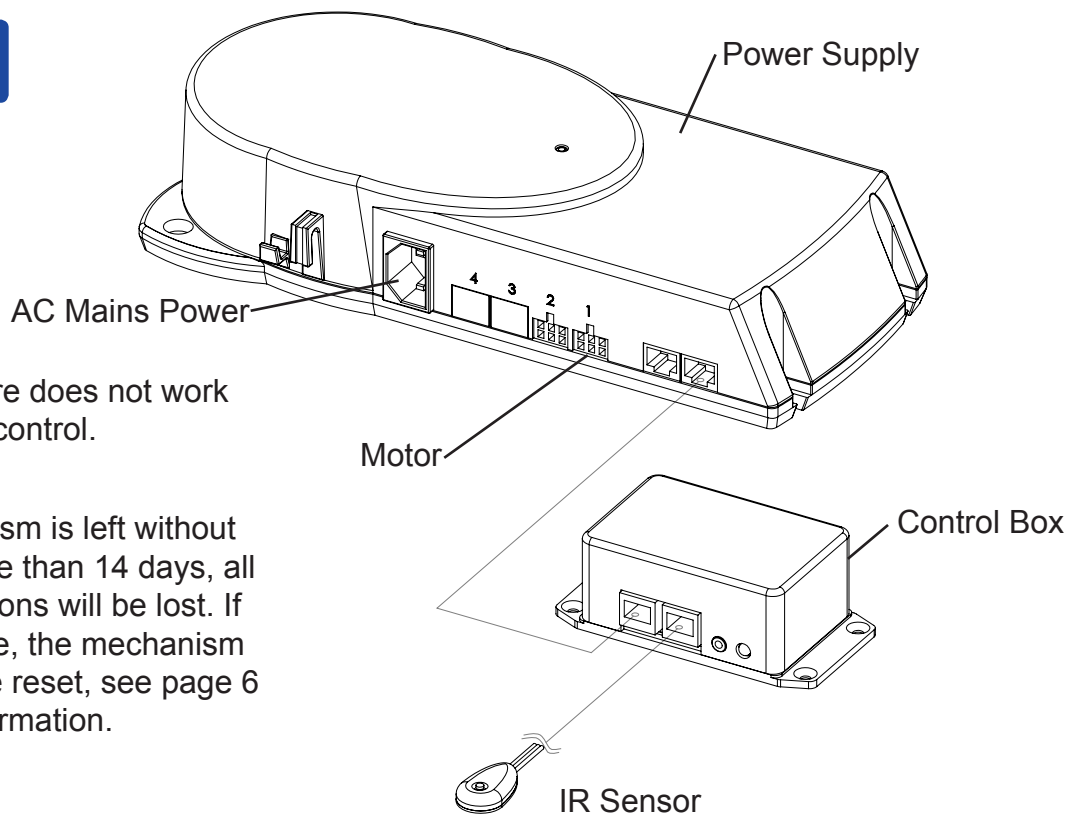

Contact closure does not work with the RFR control.



**IMPORTANT**  
If the mechanism is left without power for more than 14 days, all memory positions will be lost. If this is the case, the mechanism will need to be reset, see page 6 for further information.

Installation: IR Control

## Storing Positions


Use the manual buttons on the controller to raise and lower the screen to the desired positions. Once the screen is in the lowered position press STORE then press IN to store the current location. Use the manual buttons to raise the screen to the desired height, press STORE then press OUT to store the OUT position. The IN and OUT buttons will then raise and lower the screen to the stored locations automatically.

**In** - Lowers the screen to stored position  
**Store** - Stores the current location into the AL675 memory

**Out** - Raises the screen to stored position  
**Stop** - Will stop the operation at any point

**In manual override**

**Out manual override**

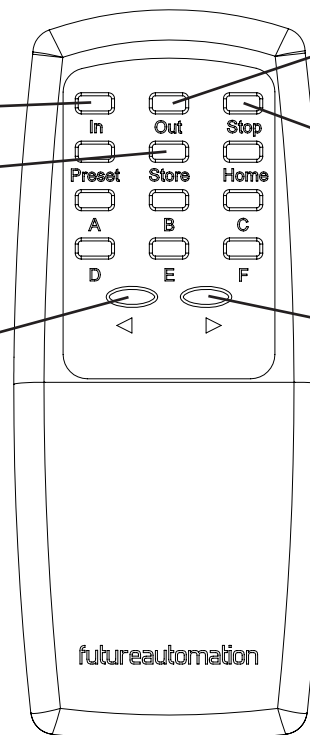

## Replacing batteries

**Future Automation IR Remote Controller** needs x2 AAA batteries which are provided within the packaging



## Safety Note

When the mechanism is moving, if any button is pressed apart from those already assigned, the mechanism will stop immediately.

# AL675 Actuator Lift




## RF Controls General Wiring





### IMPORTANT

If the mechanism is left without power for more than 14 days, all memory positions will be lost. If this is the case, the mechanism will need to be reset, see page 5 for further information.

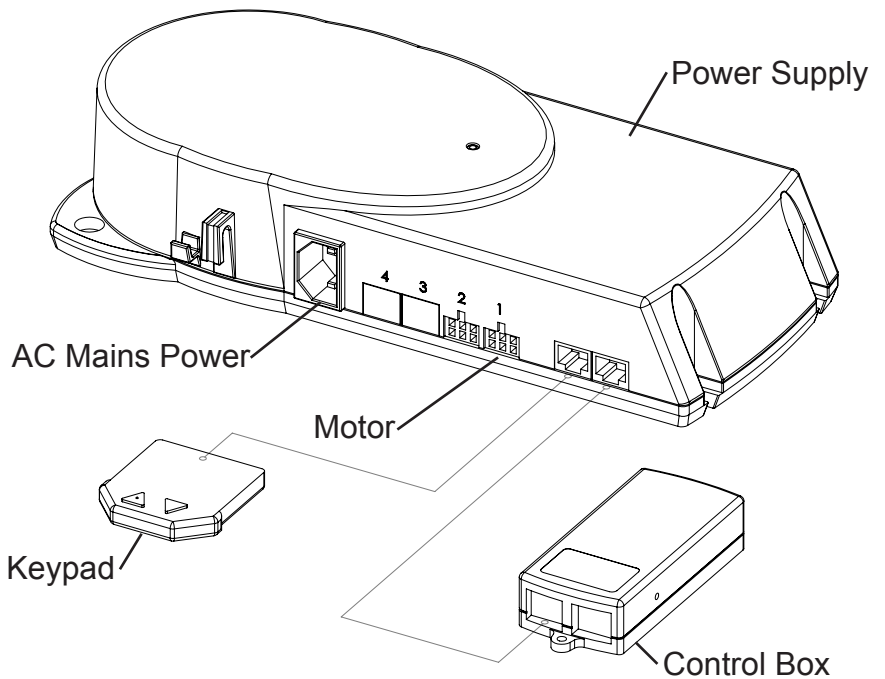

### When presetting and storing the heights you need to use the manual keypad

Use the manual key pad to move the lift to the desired up and down position. When in the correct position use the controller to store the position. Once the up and down position are stored the controller will move the lift to these positions.

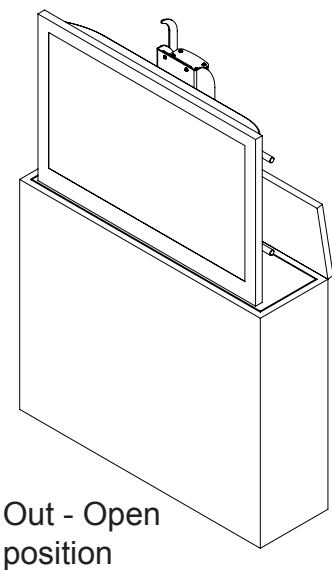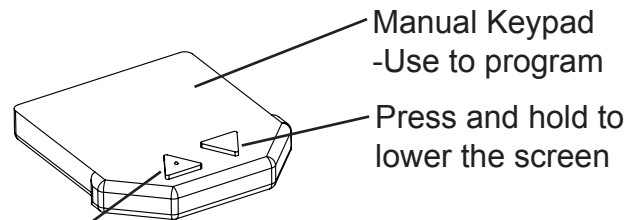

Press and hold for 3 secs to learn UP position

Press and hold for 3 secs to learn DOWN position

In - Closed position

Controller -Use to operate



Leave at least 1 second between commands



# AL675 Actuator Lift



## Actuator lift 675 - Trouble shooting guide

Having problems? - Check the following:

1. Are all the connections correct?
2. Is the mechanism being operated correctly?

If the mechanism does not operate correctly, check the items listed in the table below. Should the problem persist, there may be a malfunction. If this is the case, disconnect the mains power immediately and contact your installer

Symptom	Cause	Remedy	Page
Lift not working	Power removed for long periods	Perform system reset	5 or 14
	IR receiver not plugged in	Connect IR receiver into 'IR IN' on interface	14
	Remote control or batteries faulty	Replace batteries or remote	14
	Control unit faulty	Contact manufacture	
Lid falls back when open	Incorrect cabinet dimensions	Check cabinet dimensions	12
Rubbing noise when opening	Lid push bar not in contact with felt pad	Re-position felt pad	11
Unable to store positions	Power removed for long periods	Perform system reset	5
	Remote control faulty or batteries	Replace batteries or remote	14
	Procedure not followed correctly	Refer to instructions	14

# AL675 Actuator Lift



A general technical overview of the AL675 actuator lift







	AL675
<b>Product Dimensions (W,D,H When Closed)</b>	700x150x700 [27.6x5.9x27.6"]
<b>Weight (Kg)</b>	20Kg [44.1lb]
<b>Power Consumption</b>	Max 100W
<b>Power Consumption On Standby</b>	3W
<b>Lifting Capacity (Kg)</b>	50Kg [110.2lb]
<b>Standard Colour</b>	Black
<b>Drop Distance</b>	660mm [23.6"]
<b>Max Television Size (W,H)</b>	1200x660mm [47.2x23.6"]
<b>Control</b>	IR Remote, RF Remote & Contact Closure
<b>Power Supply</b>	240V or 110V
<b>Control Of 3rd Party Product</b>	No
<b>Output Power Supply</b>	No
<b>DC Motor Supply (W,D,H)</b>	115x280x50mm [4.5x11x2"]
<b>Control Box Size (W,D,H)</b>	56x85x35mm [2.2x3.3x1.4"]
<b>Shipping Details</b>	
<b>Dimensions (W,D,H)</b>	800x300x750mm [31.5x11.8x29.5"]
<b>Weight (Kg)</b>	25Kg [55.1lb]

# AL675 Actuator Lift

---



**Notes...**

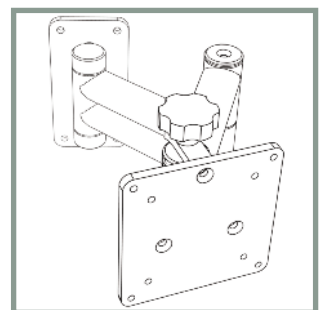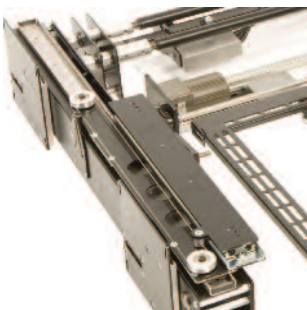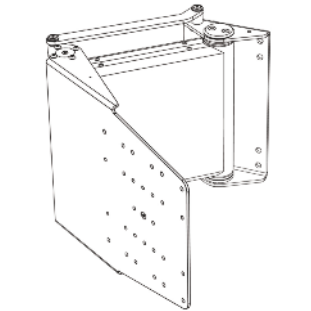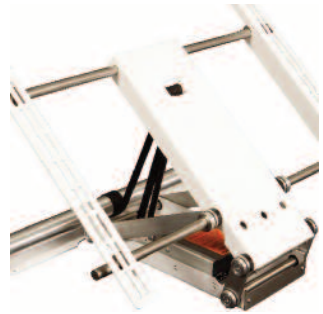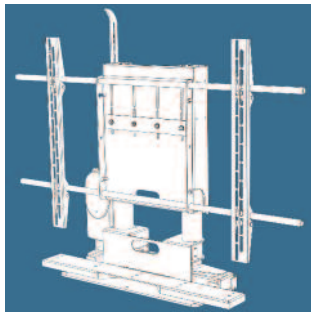

**Future Automation**  
 Unit 2 Kimpton Enterprise Park  
 Claggy Road  
 Kimpton  
 Hertfordshire  
 SG4 8HP  
 United Kingdom

Tel: +44 (0) 1438 833 577  
 Fax: +44 (0) 1438 833 565  
 Email: [info@futureautomation.co.uk](mailto:info@futureautomation.co.uk)  
[www.futureautomation.co.uk](http://www.futureautomation.co.uk)